



InData UV Often Used Codes

This appendix offers codes that are most often used in the setup and configuration of your scanner.

Suffix Settings

<LF> Suffix <CR> suffix <TAB> suffix clear all suffix



RS-232 Baud Rate

Baud Rate sends the data from the imager to the terminal at the specified rate. The host terminal must be set for the same baud rate as the imager. Default = 38,400



300



600



1200



2400



4800



9600



19,200



38,400



57,600



115,200

Interfaces

Terminal ID = 124



USB- Keyboard

Terminal ID = 130



USB Com Port Emulation

Terminal ID = 003



Keyboard Wedge

Terminal ID = 000



RS-232 Serial Port Configuration



Quick*View Setup

www.indatasys.com

Industrial Data Entry Automation Systems Incorporated

27 Fennell Street Skaneateles, NY 13152

Phone: (315) 685 8311 Fax: (315) 685-8312

Print Weight Control Settings

2



3



4



5



6



Aimer Mode



Interlaced



Concurrent



Off



Unlink Imager



Locked Link Mode
(Single Imager)



Open Link Mode
(Single Imager)



Override
Locked Imager



Data Accumulation Mode On



Data Accumulation Mode Off



Standard Product Default Settings



Quick Omni



Full Omni



Video Reverse On



Video Reverse Off



Test 123456789